

CBK AQUATICS



CBK Doser Top-Off Conversion Kit 3gal and 6.5gal

Caution!!! Please read and follow all cautions, warnings, and instructions prior to use:

- For Aquarium use only.
- Do not install near electrical outlets or power supplies.
- Always follow product manufacturers instructions for proper mixing and use of any additives or supplements.

Parts Inventory

- 1 Adjustable float valve complete with gasket and Jaco fitting
- 1 tubing assembly including rigid draw tube and delivery tubing
- 1 Additional adhesive backed delivery tubing routing clip
- Instructions

Instructions:

1. Confirm all contents listed in the parts inventory have been received.
2. Choose appropriate location for the float valve installation.
 - Should be above the desired water level (approximately 1" to 2" for vertical installations)
 - Float can be installed horizontally on a surface above the water line.
 - Precise installation is not required as float can be adjusted later to operate as desired.
3. Drill a 3/8" hole in mounting location.
4. Remove Jaco fitting and mounting nut from float valve and insert valve stem through your drilled hole.
5. Install mounting nut on outside and carefully tighten (do not over tighten) to firmly mount the float switch.
6. Insert end of delivery tubing through the Jaco fitting. **Caution – The compression fitting

inside the Jaco may come out. If this happens, simply install these pieces over delivery tubing and slide up tubing approximately 2”.

7. Insert end of delivery tubing into float valve stem until it stops.
8. Slide compression fittings and Jaco nut up and tighten onto threads of valve stem and hand tighten.
9. Route delivery tubing to your CBK Doser and install draw tube into cap (replacing your soft tubing/pinch valve assembly). Use the delivery tubing routing clip supplied as needed.
10. Ensure the float valve is open by pressing down on float and then pressurize the system by repeatedly squeezing the pressurization bulb until water begins to flow through the delivery tubing and into your tank.
11. Once water is flowing, adjust the float by loosening the wing nut. Adjust the float over a period of 2 or 3 days until desired water level is maintained.

***Please visit us online at <http://www.CBKAquatics.com> with any questions you may have.